

No.	Patch Name	Description				Speaker Data	EXP Pedal	Style
011	True Brit	LEAD2		DELAY		British 4x12		British Anniversary stack
012	LA clean	CLEAN2	CHORUS	DELAY	SPRING	British 4x12		Rich Clean Sound
013	Follow Me	DRIVE1	COMP	TAPE ECHO		Modern 4x12		Rock
021	Mellow Man	CLEAN1	COMP		HALL	American 1x12		Jazz
022	George Town	CRUNCH1	COMP	ROTARY	DELAY	YAMAHA 1x12		60's-style rhythm with rotary
023	Large Muff	LEAD1		CHORUS	DELAY	HALL	Hybrid 2x12	Smooth Lead Sound
031	Space Ranger	LEAD2		PHASER	DELAY	HALL		Experimental
032	Black Sunday	LEAD1		FLANGER			British 4x12	Heavy Metal
033	Funky Flange	CLEAN1	COMP	FLANGER	DELAY		Modern 1x12	Funk
111	Santa Ana	LEAD1			HALL	American 1x12		Rock/Fusion Fat Lead Sound
112	Van Hallo	LEAD2		DELAY		American 4x12		Heavy Metal
113	Punchy Drive	DRIVE1			SPRING	American 1x12		Rock Blues
121	Gettin' It Rhythm	DRIVE2		DELAY		YAMAHA 1x12		Country
122	Crunchy	CRUNCH1			HALL	YAMAHA 2x12		Rock
123	Classic OD	CRUNCH2		DELAY	HALL	British 4x12		Rock
131	Contemporary Jazz	CRUNCH2			SPRING	Modern 1x12		Jazz
132	Match	CLEAN1	PHASER	DELAY		Modern 2x12		Rock/Blues/Country
133	Traditional Clean	CLEAN2			SPRING	American 2x12		Clean but a little crunchy
211	Ratty Rotor	LEAD1	ROTARY	DELAY		YAMAHA 2x12		Rotary Speaker Fast
212	Ratty Rotor slow	LEAD1	ROTARY	DELAY		YAMAHA 2x12		Rotary Speaker Slow
213	Pulse Wah	CLEAN2	COMP	TREMOLO	DELAY	YAMAHA 1x12	Wah	Experimental
221	Stairwah	LEAD1		TAPE ECHO	SPRING	YAMAHA 1x12		70's Hard Rock
222	Just Enuff Grit	CRUNCH2	COMP	CHORUS	HALL	Hybrid 2x12		Country
223	ZZBlues	LEAD1		TAPE ECHO		YAMAHA 1x12		Blues Rock
231	Medicine	DRIVE1	COMP	CHORUS	SPRING	YAMAHA 1x12		80's modulated rhythm
232	Brutal Metal	LEAD1				British 4x12		Heavy Metal
233	Cowboy Baritone	DRIVE2		TREMOLO	SPRING	YAMAHA 1x12		Country
311	Texas Blue	DRIVE2	COMP	DELAY	HALL	Modern 4x12		Blues
312	Dreamscape	CLEAN1	COMP	FLANGER	TAPE ECHO	Hybrid 4x12		Triphop style atmosphere
313	Elastic	CRUNCH2	COMP	PHASER	TAPE ECHO	Hybrid 2x12		Indie rock combo
321	Big Bottom	LEAD1	COMP	FLANGER	DELAY	PLATE	YAMAHA 4x12	Massive Attack modern stack
322	One Two	CRUNCH2	COMP	CHORUS	DELAY	SPRING	YAMAHA 1x12	Britpop clean rhythm
323	Big Wing	CRUNCH2	COMP	PHASER	DELAY	PLATE	British 4x12	Rock/Blues phased rhythm
331	Hot-rodged British Lead	LEAD2		DELAY			British 4x12	Hard Rock
332	Evans Gate	DRIVE1	COMP	FLANGER	DELAY		YAMAHA 1x12	80's British Rock
333	Flip Out	LEAD1	COMP	DELAY			YAMAHA 1x12	Progressive Rock
411	Panning Power	CRUNCH2	COMP	TREMOLO	DELAY	PLATE	YAMAHA 1x12	Rock
412	Hardcore	LEAD2	COMP	CHORUS		HALL	YAMAHA 4x12	Metal
413	Muted Riffin'	CRUNCH2		PHASER	DELAY		Hybrid 2x12	Country
421	Semi-Rotary	CLEAN2	COMP	ROTARY	TAPE ECHO		American 2x12	Rock
422	Texas Metal	LEAD1	COMP	DELAY			American 4x12	Rock
423	Roots	CRUNCH1	COMP	DELAY			Hybrid 2x12	Country
431	Southern Man	DRIVE1	COMP	TAPE ECHO			YAMAHA 2x12	Rock/Blues
432	Brit Blue	LEAD2	COMP	DELAY	HALL		2x10	Blues Rock
433	Spit n' shine	CLEAN1	COMP	TAPE ECHO			Hybrid 1x12	Country/Jazz
511	A Musement	DRIVE2		CHORUS	TAPE ECHO		YAMAHA 4x12	Scooped Brit stack
512	Rockabilly	CRUNCH2	COMP	PHASER	DELAY	PLATE	YAMAHA 1x12	50's Rock'n' Roll
513	Another Brick	DRIVE1	COMP	TAPE ECHO	PLATE		YAMAHA 1x12	Progressive Rock
521	Bendz	LEAD1	COMP	FLANGER	TAPE ECHO		British 4x12	90's British Rock
522	Atmos Fear	CLEAN2	COMP	CHORUS	TAPE ECHO	PLATE	YAMAHA 2x12	Big clean combo with tape echo
523	Hot Potato	LEAD1	COMP	DELAY	SPRING		Modern 4x12	'Hot' head and 4x12" cab
531	Dirty-Brit-Poper	CRUNCH1			SPRING		British 2x12	Pop
532	Flying Pigs	DRIVE1	COMP	PHASER	TAPE ECHO		YAMAHA 1x12	slide-style lead
533	Spectacular	CRUNCH1	COMP	TAPE ECHO	SPRING		YAMAHA 1x12	early 60's lead tone
611	Lawman	CRUNCH1		PHASER	TAPE ECHO	HALL	British 4x12	Rock
612	Straight	CLEAN2	COMP	PHASER		HALL	YAMAHA 4x12	Rock/Blues
613	Rich Chorus	CLEAN1	COMP	CHORUS	DELAY		American 1x12	Any
621	Vibratone blues	CRUNCH1		CHORUS	TAPE ECHO		YAMAHA 1x12	Country/Blues
622	Hi-Gain	DRIVE2		TAPE ECHO			American 4x12	Rock
623	Nashville Echo	CLEAN2	COMP	TAPE ECHO			American 2x12	Country/Pop
631	NY Punk	DRIVE1	COMP	DELAY			British 4x12	Punk/Rock
632	Paint It	LEAD2		TREMOLO	TAPE ECHO		American 2x12	Rock
633	Rock Me	CLEAN2		TAPE ECHO			American 2x12	Rock
711	Topload	DRIVE2	COMP	TAPE ECHO	PLATE		Hybrid 2x12	70's Rock Sound
712	Screamtrain	DRIVE2	COMP	TREMOLO	TAPE ECHO		YAMAHA 4x12	Modern tremolo'd Brit head
713	Seattle	CLEAN2	COMP	FLANGER		PLATE	Modern 1x12	Grunge
721	Plexi Time	CRUNCH1	COMP	ROTARY		HALL	YAMAHA 2x12	Classic head rhythm
722	Bumblebee	CLEAN1	COMP	TAPE ECHO			YAMAHA 2x12	Clean timed delay
723	Close To The Edge	DRIVE1	COMP	CHORUS	DELAY		Hybrid 2x12	Progressive Rock
731	Tremarrio	DRIVE1	COMP	TREMOLO	DELAY	SPRING	YAMAHA 1x12	Tremolo'd rhythm
732	Heavy Lead	LEAD2		DELAY	SPRING		British 4x12	Hard Rock
733	Funky Phase	CLEAN1	COMP	PHASER	SPRING		British 4x12	Funk
811	Classic Flanging	CLEAN2	COMP	FLANGER			YAMAHA 1x12	Classic Effects
812	Power Chord	DRIVE2	COMP	TREMOLO	DELAY		American 4x12	Metal
813	Southern Rock	DRIVE1	COMP	CHORUS	TAPE ECHO	SPRING	Hybrid 2x12	Country
821	Blue Neck	CRUNCH1	COMP	TAPE ECHO			4x10	Blues
822	Clean Solo	CLEAN1	COMP	CHORUS	DELAY	HALL	Hybrid 2x12	Country
823	Queen	LEAD2		PHASER	DELAY		YAMAHA 4x12	Rock
831	Room Fills	LEAD2	COMP	DELAY			2x10	Rock
832	Cool Dawg	CLEAN2	COMP		HALL		British 2x12	All
833	Floodin Delay	DRIVE1		PHASER	SPRING		British 2x12	Rock
911	Slow Peeler	LEAD1	COMP	FLANGER	DELAY	HALL		Experimental
912	BUG-wah!!	CLEAN2		PHASER	DELAY	PLATE	YAMAHA 1x12	Experimental
913	Scrapelt	LEAD1	COMP	TREMOLO	DELAY	PLATE	YAMAHA 4x12	Experimental
921	Tajma Wah	CLEAN2	COMP	FLANGER	DELAY	HALL	YAMAHA 1x12	Experimental
922	Arena Talk	LEAD2		PHASER	DELAY	PLATE		Experimental
923	Choro Wah	LEAD2		CHORUS	TAPE ECHO	SPRING		Experimental
931	Sluggger	LEAD1		FLANGER	DELAY	PLATE		Experimental
932	Spooky Wah	CLEAN2		PHASER	DELAY	SPRING		Experimental
933	Rhythm Box	DRIVE1	COMP	TREMOLO	DELAY	PLATE	YAMAHA 4x12	Experimental

* ファクトリープリセット状態でのスピーカーシミュレーター設定：プリセットエリア = OFF、ユーザーエリア = OFF

* The factory preset for the Speaker Simulator is as follows: Preset Area Patches = OFF, User Area Patches = OFF

* Les pré-réglages usine du simulateur de haut-parleur sont comme suit : Patches de zone de pré-réglage = inactifs, patches de zone utilisateur = inactifs

* Die werkseitigen Vorgabeinstellungen des Lautsprecher-Simulators sind wie folgt: Preset Area-Patches = AUS, User Area-Patches = AUS

* El preajuste inicial de fábrica para el simulador de altavoces es el siguiente: Parches del área de preajustes = OFF, Parches del área del usuario = OFF.

* Le impostazioni predefinite per il simulatore di altoparlanti sono le seguenti: patch preselezionati = disattivati, patch dell'utente = disattivati.

* De fabrieksinstelling voor de luidspreker-simulator is als volgt: Voorgeprogrammeerd gedelde patches = OFF (uit), Gebruikersgedeelte patches = OFF (uit)