 



1 Try selecting the preset song or scene from the keyboard!



While holding down the [BGM] button, press the highlighted keys shown below to select the desired song or scene.

Scene										50 piano preset songs																																									
Home Party Upbeat Relaxing Nighttime Mood Music Baroque and Pre-romantic Music Post-romantic Modern French										Song No. 1 Song No. 2 Song No. 3 Song No. 4 Song No. 5 Song No. 6 Song No. 7 Song No. 8 Song No. 9 Song No. 10 Song No. 11 Song No. 12 Song No. 13 Song No. 14 Song No. 15 Song No. 16 Song No. 17 Song No. 18 Song No. 19 Song No. 20 Song No. 21 Song No. 22 Song No. 23 Song No. 24 Song No. 25 Song No. 26 Song No. 27 Song No. 28 Song No. 29 Song No. 30 Song No. 31 Song No. 32 Song No. 33 Song No. 34 Song No. 35 Song No. 36 Song No. 37 Song No. 38 Song No. 39 Song No. 40 Song No. 41 Song No. 42 Song No. 43 Song No. 44 Song No. 45 Song No. 46 Song No. 47 Song No. 48 Song No. 49 Song No. 50																																									
A#-1	C#0	D#0	F#0	G#0	A#0	C#1	D#1	F#1	G#1	A#1	C#2	D#2	F#2	G#2	A#2	C#3	D#3	F#3	G#3	A#3	C#4	D#4	F#4	G#4	A#4	C#5	D#5	F#5	G#5	A#5	C#6	D#6	F#6	G#6	A#6	C#7															
A-1	B-1	C0	D0	E0	F0	G0	A0	B0	C1	D1	E1	F1	G1	A1	B1	C2	D2	E2	F2	G2	A2	B2	C3	D3	E3	F3	G3	A3	B3	C4	D4	E4	F4	G4	A4	B4	C5	D5	E5	F5	G5	A5	B5	C6	D6	E6	F6	G6	A6	B6	C7

 2 Try selecting the voice or parameter settings from the keyboard!






While holding down the [VOICE] button, press the highlighted keys shown below to select the desired voice or set the parameters.

Voices (Including Dual voices)										Reverb Type			Reverb Depth						Dual Octave Setting			Dual Balance			Touch																										
Grand Piano 1 Piano & Strings E. Piano 2 Church Organ Strings Vibraphone Grand Piano 2 E. Piano 1 Jazz Organ Harpsichord										Room Hall 2 Off Hall 1 Stage			0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 Most suitable for the selected voice						-1 (Voice 1) +1 (Voice 1) 0 (Voice 2) +1 (Voice 2) -5 -4 -3 -2 -1			0 +2 +4 +5 +1 +3 +6			Does not change at all Standard piano touch response Does not change much Changes very widely																										
A#-1	C#0	D#0	F#0	G#0	A#0	C#1	D#1	F#1	G#1	A#1	C#2	D#2	F#2	G#2	A#2	C#3	D#3	F#3	G#3	A#3	C#4	D#4	F#4	G#4	A#4	C#5	D#5	F#5	G#5	A#5	C#6	D#6	F#6	G#6	A#6	C#7															
A-1	B-1	C0	D0	E0	F0	G0	A0	B0	C1	D1	E1	F1	G1	A1	B1	C2	D2	E2	F2	G2	A2	B2	C3	D3	E3	F3	G3	A3	B3	C4	D4	E4	F4	G4	A4	B4	C5	D5	E5	F5	G5	A5	B5	C6	D6	E6	F6	G6	A6	B6	C7


Quick Operation Guide

3 Fine-tune the pitch of the instrument.

Simultaneously hold down the highlighted keys at the far left of the keyboard, and press the one of the highlighted keys in the center (shown bellow) to adjust the fine tuning setting.

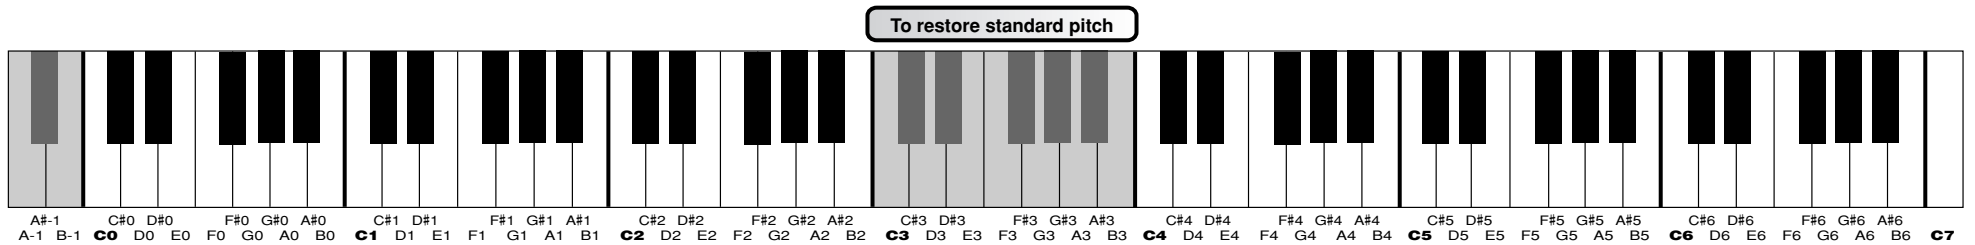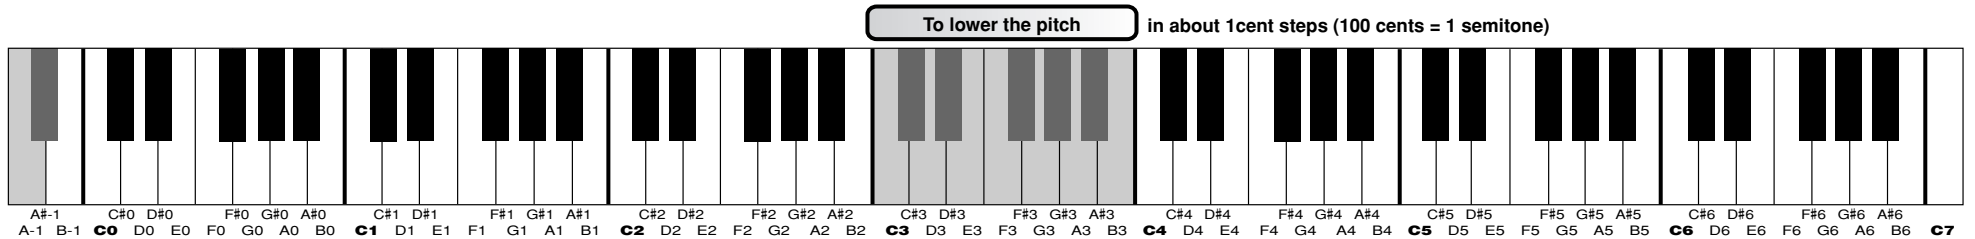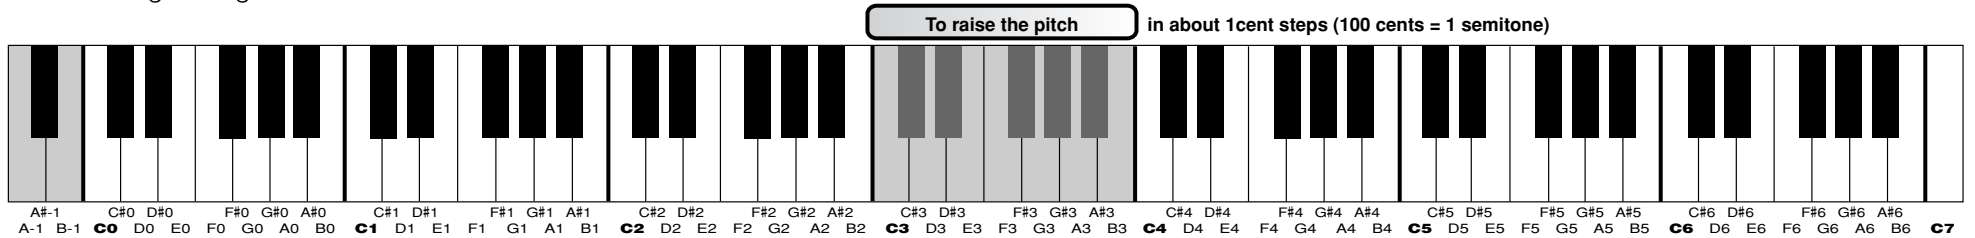

 4 Change the transpose setting or playing track from the keyboard!



Simultaneously hold down both the [BGM] and [VOICE] buttons, and press the one of the highlighted keys shown bellow to change the transpose setting or playing track.

