

Thank you for selecting the Yamaha Karaoke Speaker System.

PRECAUTIONS

Read this before using the speaker.

- To assure the finest performance, please read this manual carefully. Keep it in a safe place for future reference.
- Install the speaker in a cool, dry, clean place – away from windows, heat sources, sources of excessive vibration, dust, moisture and cold. Avoid sources of humming (transformers, motors). To prevent fire or electrical shock, do not expose the speaker to rain or water.
- To prevent the enclosure from warping or discoloring, do not place the speaker where it will be exposed to direct sunlight or excessive humidity.
- Do not place the following objects on the speaker:
 - Glass, china, etc.
 - If glass etc. falls by vibrations and breaks, it may cause personal injury.
 - A burning candle etc.
 - If the candle falls by vibrations, it may cause fire and personal injury.
 - A vessel with water in it
 - If the vessel falls by vibrations and water spills, it may cause damage to the speaker, and/or you may get an electric shock.
- Do not place the speaker where foreign objects such as water drips might fall. It might cause a fire, damage to the speaker, and/or personal injury.
- Do not place the speaker where it is liable to be knocked over or struck by falling objects. Stable placement will also ensure better sound performance.
- Placing the speaker on the same shelf or rack as the turntable can result in feedback.
- Never put a hand or a foreign object into the port located on the rear of the speaker as this might cause personal injury and/or damage to the speaker.
- When moving the speaker, do not hold the port as it might cause personal injury and/or damage to the speaker.



- Any time you note distortion, reduce the volume control on your amplifier to a lower setting. Never allow your amplifier to be driven into "clipping". Otherwise the speaker may be damaged.
- When using an amplifier with a rated output power higher than the nominal input power of the speaker, care should be taken never to exceed the speaker's maximum input.
- Do not attempt to clean the speaker with chemical solvents as this might damage the finish. Use a clean, dry cloth.
- Do not attempt to modify or fix the speaker. Contact qualified Yamaha service personnel when any service is needed. The cabinet should never be opened for any reasons.
- As this unit is heavy, whenever it is moved, two people are required to transport it safely.
- Place the speaker away from a TV. If not, the TV screen may become blurred.
- When choosing a power amplifier for use with this device, make sure that the output power of the amplifier is lower than the power capacity of this device. Malfunction or fire may occur especially when the following sounds or noises are generated:
 - feedback, when using a microphone
 - continuous and extreme volume sound from a musical instrument
 - extreme continuous distorted sound
 - noise caused by plugging/unplugging the cable while the amplifier is turned on
- Secure placement or installation is the owner's responsibility. Yamaha shall not be liable for any accident caused by improper placement or installation of the speaker.**

CONNECTING TO YOUR AMPLIFIER

Caution

BEFORE MAKING CONNECTIONS, MAKE SURE THAT THE AMPLIFIER IS SWITCHED OFF.

Connect the cables as shown below.

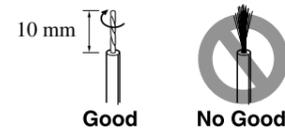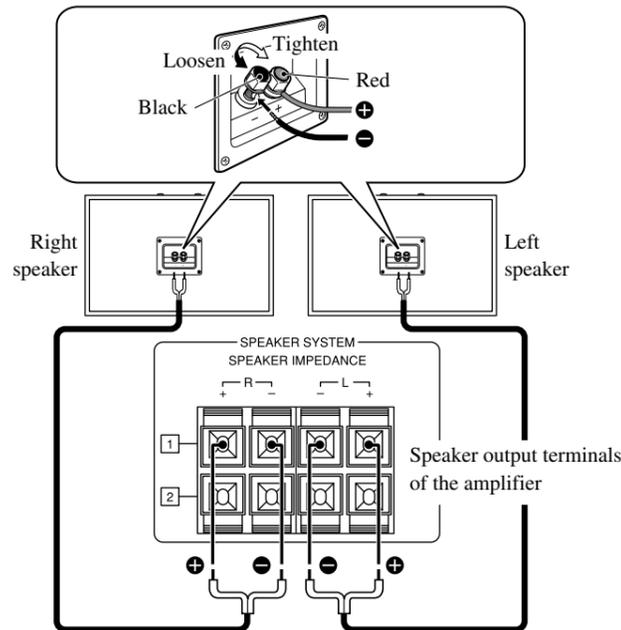


Notes

- Do not let the bare speaker wires touch each other as this could damage the speaker or the amplifier, or both.
- Do not insert the insulation into the hole. Sound may not be produced.

When using a banana plug


Note

Use a suitable instrument to remove the cover. Removing it with your bare hands may hurt your fingertips.

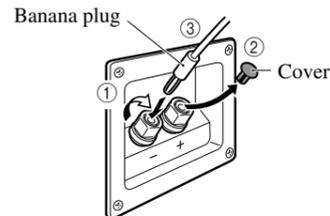

MOUNTING THIS SPEAKER SYSTEM TO A CEILING

You can also use the screw holes on the top of the speaker for installing the speaker on the ceiling by using commercially available mounting brackets. To fix the speaker to a mounting bracket, use the screws inserted to the screw holes of the speaker as the factory default status. If you use the commercially available screws, use the screws that matches to the following specifications: Screw type.....M8 Screw length..... 35 mm or more

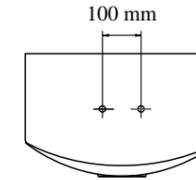

Caution

- The required length of a screw differs depending on the mounting bracket to be used. Select a screw which is suitable for use with the mounting bracket and can be fully inserted into the hole on the speaker.
- As this product is heavy, do not attach them to thin plywoods or soft wall surface materials, as the screws may tear free from flimsy surfaces, causing the speakers to fall and be damaged, or result in personal injury.
- Do not fasten the speakers to the ceiling with nails, adhesives, or other unsound hardware. Long-term use and vibrations may cause them to pull free.
- To avoid accidents resulting from tripping over loose speaker cables, fix these to the wall along with the speakers.


REMOVING THE FRONT COVER

- Remove the screws (4 pieces) from both sides (figure ①).
- Grasp the front cover with your fingers with your thumbs at the top edge of the main unit, then gently push with your thumbs (figure ②) to pry the cover loose. Do the same for the bottom edge.
- Pull the cover straight out from the speaker (figure ③).

To reattach, do these steps in reverse order. The 4 pegs inside the cover should be set in the corresponding holes on the speaker.

Note

Be careful not to scratch yourself with the edge of the front cover.

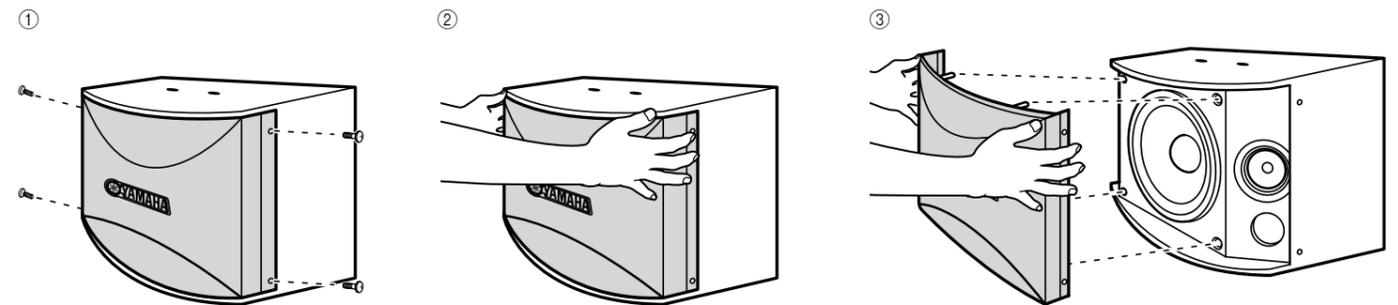

SPECIFICATIONS

Type	2-way 3-speaker bass reflex speaker system	Dimensions (W × H × D)	<KMS-910> 501 × 320 × 318 mm
Driver	<KMS-910> 7.7 cm (3") cone type tweeter × 2 25 cm (10") cone type woofer	<KMS-710>	452 × 259 × 284 mm
	<KMS-710> 7.7 cm (3") cone type tweeter × 2 20 cm (8") cone type woofer	Weight	<KMS-910> 12.2 kg
		<KMS-710>	8 kg
Impedance	8 (ohm)	Specifications are subject to change without notice due to product improvements.	
Frequency response	<KMS-910> 55 Hz to 20 kHz (-10 dB)	Care should be taken not to exceed the input power values noted above.	
	<KMS-710> 60 Hz to 20 kHz (-10 dB)	The woofer employs a material for the surround to achieve high sound quality. The useful life of the speaker surround depends on usage conditions and environment (especially ultraviolet radiation exposure and humidity), etc. When the speaker surround reaches the end of its useful life, refer to your dealer for replacement.	
Rated input power	<KMS-910> 150 W		
	<KMS-710> 80 W		
Maximum input power	<KMS-910> 450 W		
	<KMS-710> 240 W		
Crossover frequency	<KMS-910> 2.5 kHz, 15 kHz		
	<KMS-710> 2.6 kHz, 15 kHz		